


MAINTENANCE

Maintenance

To ensure the diffuser works properly, we recommend cleaning the diffuser and changing oils every three days.

- Disconnect the diffuser unit from power before cleaning.
- Use a damp/wet cloth to clean exterior part of the unit.
- Use a damp cloth to clean the inside of the water tank.
 - Keep water from entering the vent.
- Do not use harsh detergents, solvents or abrasive agents to clean the diffuser unit.
- Use the diffuser unit on a dry and even surface.

 Clean the water tank every 3 days.

Warning

If you suspect any abnormalities during use, such as smoke, you should unplug the adapter immediately to prevent any accidents such as fire or electric shock. Additional signs may include peculiar smells or harsh sounds.

- Wrapping the adapter with cloth or paper could disrupt proper dissipation of heat and cause a fire.
- Never attempt to disassemble or repair the product.
- Please keep the product out of the reach of children to avoid injury or electric shock.
- Corrosive oils such as citronella or cinnamon may cause damage to the unit if left in the reservoir for long periods of time.

TROUBLESHOOTING

Symptom	Possible Cause	Solution
Unit not working/ no mist or mist has diminished.	Power supply is not connected.	Plug in the power and press the button.
	Insufficient water.	Refill the water tank.
	Water exceeds the max. water level line.	Dump the excess water.
	Ceramic disc may be dirty.	Clean ceramic disc and water tank.
	Top cover is not secured.	Secure the top cover.
	Air inlet is blocked or dirty.	Make sure air inlet is clean and ventilated.
Water is leaking from main unit.	Air outlet is blocked or dirty.	Make sure air outlet is clean and ventilated.
	Top cover is not secured.	Secure the top cover.

V46900B

WARNING IMPORTANT SAFETY INSTRUCTIONS

WARNING - When using electric products, basic precautions should always be followed, including the following:


- a) Read all the instructions before using the product.
- b) To reduce the risk of injury, close supervision is necessary when a product is used near children.
- c) Do not put fingers or hands into the product.

NOTE FOR PLUG:

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

PLEASE READ AND SAVE THESE INSTRUCTIONS

aura diffuser



COOL-MIST STEAM COVERS UP TO 700 SQ. FT.
22 HOURS QUIET RUN TIME WITH AUTO SHUT-OFF.
HOLDS 2.2 LITERS WATER.

SPECIFICATIONS

Input: AC 230V
Power: 23W
Water Capacity: 2200ml

1. Top Cover

2. Air Pump

3. Mist Outlet

4. Water Tank

6. Mist Button

7. Light Button

5. Power Indicator Lights

8. Timer Button

9. Air Outlet

10. Max Water Level Line

 
11. Ceramic Disc

12. Power Cord


DIRECTIONS

1. Remove the top cover from the water tank.
2. For optimal performance, fill slightly below the max water level line. (Both distilled water and tap water can be used in diffuser)
3. If filling to the top line, add 30 drops of essential oil to the water tank.
4. Replace top cover onto the water tank.
5. Plug the power cord into the diffuser.
6. Connect the plug to a power outlet.
7. Press the power button to turn on the diffuser and set the duration of diffusing time desired.


1.

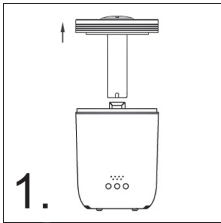

 
2.

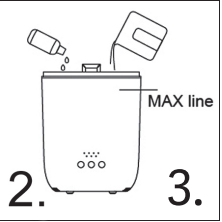

 
3.

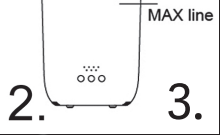

 
4.

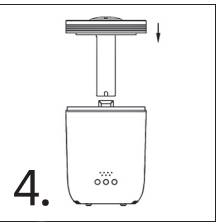

 
5.

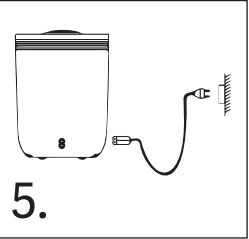

 6.

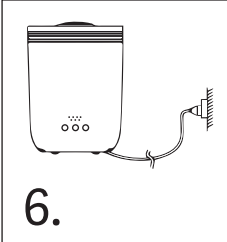

 7.

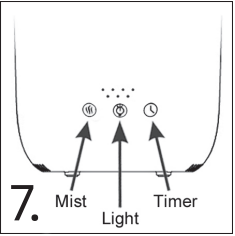

MODES OF OPERATION

For the best results and maximum mist volume, the water level needs to be below the max water line.

Mist button (on left) :

1st press: Continuous mist mode on high mist intensity with "H" Power Indicator light and bright white light on.

2nd press: Continuous mist mode on low mist intensity with "L" Power Indicator light and bright white light on.

3rd press: Sleep Mode-low mist intensity without lights. During Sleep mode, all lights will turn off except the "Moon (Moon sign)" Power indicator light.

Timer button (on right) :

1st press: Continuous mist mode for 2 hours, then will turn off.

2nd press: Continuous mist mode for 4 hours, then will turn off.

3rd press: Continuous mist mode for 8 hours, then will turn off.

4th Press: Continuous mist mode for about 15 hours, then will turn off.



Light button (center):

1st Press: bright white light

2nd Press: soft white light

3rd Press: turns light off

NOTE: Do not lean or move or attempt to empty or refill unit while plugged in.



TRANSFORM YOUR SPACE, MIND, BODY & SPIRIT

Scent & humidify your largest rooms (up to 700 sq. ft.) for up to 22 hours, with this sleek diffuser-humidifier combo.

Use exclusively with 100% pure Alo essential oils for optimal benefits:

breathe + spa
signature blend

uplift + reset
signature blend

sleep + soothe
signature blend

energize + refresh
peppermint

chill + unwind
lavender

awaken + center
eucalyptus