


Vakuumsaugdüse VN-...-P

FESTO

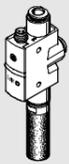

Bedienungsanleitung Festo SE & Co. KG
Postfach
D-73726 Esslingen
Phone:
+49/711/347-0
www.festo.com

Original: de
0507NH de 694 781



Warnung

Unter Druckluft stehende Produkte können Personen- oder Sachschäden verursachen.

- Schalten Sie vor Installations- und Wartungsarbeiten die Druckluftversorgung aus.
- Verwenden Sie zur Entlüftung der Anlage Absperrventile in der Druckluftzuleitung.



Warnung

Abhängig von der Funktionalität der Maschine/Anlage kann die Manipulation von Signalzuständen schwere Personen- oder Sachschäden verursachen.



Hinweis

Einbau und Inbetriebnahme nur von autorisiertem Fachpersonal, gemäß Bedienungsanleitung.

Dieses Produkt ist ausschließlich zur Verwendung mit Druckluft vorgesehen. Zur Verwendung mit anderen Medien (Flüssigkeiten oder Gasen) ist das Produkt nicht geeignet.

1 Anwendung

Die Vakuumsaugdüse VN-...-P wird bestimmungsgemäß zur Erzeugung von Vakuum eingesetzt. Mit dem erzeugten Vakuum wird über Sauggreifer eine Kraft aufgebaut mit der Werkstücke transportiert werden können. Dabei überwacht der integrierte Vakuumschalter das erzeugte Vakuum und liefert elektrische Signale. Der Vakuumschalter schließt (Schaltelementfunktion NO: Schließer) einen Stromkreis bei Erreichen des programmierten Schalldrucks. Die Schaltelementfunktion ist ab Werk voreingestellt. Die VN-...-P ist mit unterschiedlichen Schaltfunktionen erhältlich.

Merkmale	Typ (Bestellcode)	Ausprägung
Vakuumsaugdüse	VN-...	
Nennweite Lavaldüse	-05-...	0,45 mm
	-07-...	0,7 mm
	-10-...	0,95 mm
Vakuumentyp	-H-...	Hohes Vakuum/Standard
	-L-...	Hoher Saugvolumenstrom/Standard
Gehäusetyp	-T4-...	T-Form, Gehäusebreite 16 mm
	-PQ2-...	Steckanschluss QS6
Druckluftanschluss 1	-PQ2-...	Steckanschluss QS6
Vakuumananschluss 2	-VQ2-...	Steckanschluss QS6
Schaltfunktion	-O1-...	Schwellwert mit fester Hysterese, 2 Teachpunkte, Schließer
	-O2-...	Schwellwert mit variabler Hysterese, Schließer
Elektrischer Ausgang	-P	Ein Schaltausgang PNP

2 Voraussetzungen für den Produkteinsatz



Hinweis

Durch unsachgemäße Handhabung entstehen Fehlfunktionen. Stellen Sie sicher, dass die nachfolgenden Vorgaben stets eingehalten werden.

- Vergleichen Sie die Grenzwerte in dieser Bedienungsanleitung mit denen Ihres Einsatzfalls (z. B. Betriebsmedium, Drücke, Kräfte, Momente, Temperaturen, Massen, Betriebsspannungen, Durchflüsse).
- Berücksichtigen Sie die Vorschriften der Berufsgenossenschaft, des Technischen Überwachungsvereins, des VDE oder entsprechende nationale Bestimmungen.
- Berücksichtigen Sie die Umgebungsbedingungen am Einsatzort.
- Verwenden Sie das Produkt im Originalzustand ohne jegliche eigenmächtige Veränderung.
- Entfernen Sie Partikel in den Zuleitungen mittels Durchblasen der Rohre und Schläuche. Dadurch schützen Sie die VN-...-P vor frühzeitigem Ausfall oder höherem Verschleiß (siehe DIN ISO 4414, Abs. 9.4).

3 Einbau

Die Einbaulage ist beliebig. Vermeiden Sie den Einbau mit Edit-Knopf nach unten, um eine Kondensatansammlung im Sensor zu vermeiden.

3.1 Mechanisch

- Befestigen Sie die VN-...-P mit zwei Schrauben M3 [3] an der vorgesehenen Stelle, Anzugsdrehmoment max. 0,6 Nm. Die Verwendung entsprechender Unterscheiben wird empfohlen.

3.2 Pneumatisch

- Verschlauchen Sie die QS6-Steckanschlüsse für Druckluft [1] und Vakuum [2] der VN-...-P mit einem entsprechenden Schlauch. Die Verwendung von Schlauchtyp PUN-6 wird empfohlen.

3.3 Elektrisch



Warnung

Verwenden Sie ausschließlich Stromquellen, die eine sichere elektrische Trennung der Betriebsspannung nach IEC/DIN EN 60204-1 gewährleisten. Berücksichtigen Sie zusätzlich die allgemeinen Anforderungen an PELV-Stromkreise gemäß IEC/DIN EN 60204-1.



Hinweis

Lange Signalleitungen reduzieren die Störfestigkeit.


- Stellen Sie sicher, dass die Signalleitungslänge stets kleiner als 30 m ist. Dadurch vermeiden Sie Fehlströme durch elektromagnetische Störfelder.



Hinweis

Im Falle von elektrostatischen Entladungen auf das Gerät, kann es in seltenen Fällen zum kurzzeitigen Umschalten des digitalen Schaltausgangs kommen.

Schaltbild

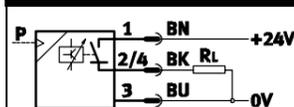

- Verkabeln Sie den elektrischen Anschluss [5] der VN-...-P wie folgt:

Pin	Belegung	Kabelfarben 1)	Stecker 2)
1	+ 24 V DC Versorgungsspannung	Braun (BN)	M8x1, 3-polig 1 + 2/4 3
2/4	Ausgang A (Out A)	Schwarz (BK)	
3	0 V	Blau (BU)	

- 1) Bei Verwendung der Anschlussdose mit Kabel lt. Zubehör
2) Anzugsdrehmoment max. 0,3 Nm

4 Inbetriebnahme

- Stellen Sie sicher, dass im Transportbereich des Werkstücks:
 - sich niemand unter dem Werkstück befindet
 - sich keine Fremdgegenstände befinden (z. B.: durch Schutzgitter)
- Vermeiden Sie lange Schlauchleitungen und große Volumen zwischen Sauggreifer und Vakuumsaugdüse. Ein großes Volumen führt zu langen Evakuierungszeiten und möglichen Einstellfehlern am Vakuumschalter.
- Berücksichtigen Sie auftretende Beschleunigungen, Fremdeinwirkungen etc. am Werkstück bei der Einstellung der notwendigen Haltekraft.

Zum Aufbau des Vakuums:

- Beaufschlagen Sie die VN-...-P mit einem Betriebsdruck an Druckluftanschluss [1]. Dadurch wird ein entsprechendes Vakuum am Vakuumananschluss [2] erzeugt. Durch Verändern des Betriebsdrucks wird das Vakuum eingestellt. Das Werkstück muss durch das erzeugte Vakuum sicher am Sauggreifer halten.

Zur Einstellung des Vakuumschalters:

Die Einstellung des Vakuumschalters zur Überwachung des Vakuums hängt von der jeweiligen Anwendung ab.

- Schalten Sie die Betriebsspannung ein. Die VN-...-P befindet sich im Grundzustand.

Definition

Schalldruck SP	Vakuum, bei dem die VN-...-P schaltet.
Teachdruck TP	Vakuum zum Zeitpunkt der Programmierung

Stellen Sie den Schalldruck im EDIT-Modus wie folgt ein:

1. Beaufschlagen Sie die VN-...-P mit einem Teachdruck (z. B.: TP1). Die Reihenfolge der Teachdrücke ist unerheblich.
 2. Drücken Sie den Edit-Knopf [7], bis die LED [6] zu blinken beginnt. Beim Loslassen speichert die VN-...-P den ersten Teachdruck. Danach blinkt die LED weiter.
 3. Beaufschlagen Sie die VN-...-P mit dem anderen Teachdruck (z. B.: TP2).
 4. Drücken Sie den Edit-Knopf [7], bis die LED [6] aufhört zu blinken. Beim Loslassen speichert die VN-...-P den zweiten Teachdruck und beendet den EDIT-Modus. Der Zusammenhang zwischen Teachdruck, Schalldruck und Hysterese zeigt die nachfolgende Tabelle. Bei der VN-...-O1-P wird der Schalldruck aus dem Mittelwert beider Teachdrücke gebildet ($SP = \frac{1}{2}(TP1 + TP2)$). Bei der VN-...-O2-P wird der höhere Teachdruck zum Schalldruck.
- Prüfen Sie in einem Probelauf mit wechselnden Drücken, ob die VN-...-P wie gewünscht schaltet. Parallel zum programmierten Schaltverhalten leuchtet die LED [6].

Typ	Schaltfunktion	Diagramm
VN-...-O1-P	Schwellwertkomparator mit fester Hysterese, Schließer	
VN-...-O2-P	Schwellwertkomparator mit variabler Hysterese, Schließer	

Zum Abbau des Vakuums:

- Sperren Sie die Druckluftzufuhr an Anschluss [1]. Der Vakuumananschluss [2] wird über den Schalldämpfer [4] belüftet. Das Werkstück löst sich vom Sauggreifer.

5 Bedienung und Betrieb

Schalldruck ändern, siehe Kapitel "Inbetriebnahme".

Bei Stromausfall bleibt die letzte Einstellung des Schalldrucks gespeichert.

6 Störungsbeseitigung

Störung	Mögliche Ursache	Abhilfe
Keine LED-Anzeige	Versorgungsspannung fehlt oder keine zulässige Betriebsspannung	Versorgungsspannung einschalten/zulässigen Betriebsspannungsbereich einhalten
	Anschlüsse vertauscht (verpolt)	VN-...-P gemäß Anschlussbild verkabeln
	Druckausfall	Druckausfall beseitigen
	VN-...-P mit unzulässigem Medium betrieben	VN-...-P austauschen und nur mit Druckluft betreiben
LED-Anzeige oder Schaltausgang verhält sich nicht entsprechend der vorgenommenen Einstellungen	VN-...-P defekt	VN-...-P mit Fehlerbeschreibung zu Festo senden
	Kurzschluss oder Überlast am Ausgang	Kurzschluss/Überlast beseitigen
	Falscher Schaltpunkt geteacht (z. B. bei 0 bar)	Teachvorgang wiederholen (siehe Kapitel "Inbetriebnahme")
VN-...-P defekt	VN-...-P mit Fehlerbeschreibung zu Festo senden	

7 Zubehör


Bezeichnung	Typ
Steckdosenkabel, M8x1, 3-polig	SIM-M8-3..D-...

8 Technische Daten

Typ VN-...	-O1-P	-O2-P
Betriebsdruck	[bar]	1 ... 8
Überlastdruck am Vakuumananschluss	[bar]	≤ 5
Betriebsmedium		Getrocknete, gefilterte und nicht geölte Druckluft
Druckmessbereich	[bar]	-1 ... 0
Genauigkeit	[% FS]	±1,5
Einstellbereich Schwellwerte	[bar]	-1 ... 0 (empfohlener Arbeitsbereich: -0,95 ... -0,05 % FS)
Hysterese	[% FS]	2
Einstellbereich Hysterese	[% FS]	-
		0 ... 100 (empfohlener Arbeitsbereich: 5 ... 95 % FS)
Temperaturkoeffizient Schaltpunkt	[% FS/K]	±0,05
Umgebungstemperatur	[°C]	0 ... +50
Mediumtemperatur	[°C]	0 ... +60
Betriebsspannungsbereich	[V DC]	15 ... 30
Leerlaufstrom	[mA]	≤ 30
Max. Ausgangsstrom	[mA]	100
Schutzfunktionen		Angepasst MZ, MY, ME-Spulen Taktend Vorhanden
Schutzart		IP40
Störausendung Störfestigkeit		Nach EN 61000-6-4 (Industrie) Nach EN 61000-6-2 (Industrie)
Schwingungsfestigkeit nach DIN/IEC 68/EN 60068 Teil 2-6: 0,35 mm Weg bei 10...60 Hz, 5 g Beschleunigung bei 60...150 Hz		
Schockfestigkeit nach DIN/IEC 68/EN 60068 Teil 2-27: 30 g Beschleunigung bei 11 ms Dauer (Halbsinus)		

Vacuum generator VN-...-P

FESTO

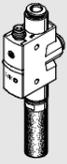

Operating instructions

Festo SE & Co. KG
P.O. Box
D-73726 Esslingen,
Germany
Tel.:
+49/711/347-0
www.festo.com

Original: de

0507NH en

694 781



Warning

Products under pressure can cause injury to human beings and damage to property.

- Before carrying out installation and maintenance work always switch off the compressed air supply.
- Use shut-off valves in the compressed air tubing for exhausting the system.



Warning

Depending on the functioning of the machine/system, the manipulation of signal states can cause serious injury to human beings and damage to property.



Please note

Fitting and commissioning to be carried out only by qualified personnel in accordance with the operating instructions.

This product is designed to be operated with compressed air only. The product is not suitable for use with other media (liquids or gases).

1 Application

The vacuum generator type VN-...-P is designed for generating vacuum. With the vacuum generated, a force is built up via suction grippers with which work items can be transported. The integrated vacuum switch monitors here the vacuum generated and provides electric signals. The vacuum switch closes (switch element function NO: normally-open) a current circuit when the programmed switching pressure is reached. The switching element function is preset at the factory. The VN-...-P is available with different switching functions.

Key features	Type (order code)	Design
Vacuum suction nozzle	VN-...	
Rated size of Laval nozzle	-05-...	0.45 mm
	-07-...	0.7 mm
	-10-...	0.95 mm
Vacuum type	-H-...	High vacuum/standard
	-L-...	High suction volume current/standard
Housing type	-T4-...	T-form, housing width 16 mm
Compressed air connection 1	-PQ2-...	Plug connector QS6
Vacuum connection 2	-VQ2-...	Plug connector QS6
Switching function	-01-...	Threshold value with fixed hysteresis, 2 teach points, normally-open contact
	-02-...	Threshold value with variable hysteresis, normally-open contact
Electric output	-P	Switching output PNP

2 Safety conditions



Please note

Improper handling can result in malfunctions. Make sure that the following specifications are always observed.

- Compare the maximum values specified in these operating instructions with your actual application (e.g. operating media, pressures, forces, torques, temperatures, masses, speeds, operating voltages, flow rates).
- Please comply with national and local safety laws and regulations.
- Take into consideration the ambient conditions at the location of use.
- Unauthorised product modification is not permitted.
- Remove dirt particles in the supply lines by blowing out the tubing with compressed air. In this way you will protect the VN-...-P from premature failure or heavy wear (see DIN ISO 4414, section 9.4).

3 Installation

The valve terminal can be fitted in any position. Do not mount with the Edit button facing downwards in order to avoid condensation gathering in the sensor.

3.1 Mechanical installation

- Fasten the VN-...-P with two M3 screws [3] in the intended position, tightening torque max. 0.6 Nm. We recommend that suitable washers be used.

3.2 Pneumatic installation

- Connect the QS6 plug connections for compressed air [1] and vacuum [2] of the VN-...-P with suitable tubing. We recommend that tubing type PUN-6 be used.

3.3 Electrical installation



Warning

Use only power units which guarantee reliable electrical isolation of the operating voltage as per IEC/DIN EN 60204-1. Observe also the general requirements for PELV power circuits as per IEC/DIN EN 60204-1.



Please note

Long signal cables reduce the immunity to interference.


- Make sure that the signal cable is never longer than 30 m. In this way you can avoid non-operate currents caused by electromagnetic interference.



Please note

If there are electrostatic discharges on the device, the digital switching output may in some cases be switched for a brief period.

Circuit diagram

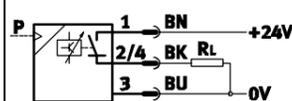

- Wire the electrical connection [5] of the VN-...-P as follows:

Pin	Assignment	Cable colours 1)	Plug 2)
1	+ 24 V DC power supply	brown (BN)	M8 x 1, 3-pin 1 2/4 3
2/4	Output A (out A)	black (BK)	
3	0 V	blue (BU)	

- 1) Using the connector socket with cable as specified in the chapter "Accessories"
- 2) Tightening torque max. 0.3 Nm

4 Commissioning

- Make sure that:
 - nobody is standing in the positioning range of the work item
 - there are no objects in the path of the moveable mass (e.g.: by means of a protective screen).
- Avoid long tubing and large volumes between the suction grippers and the vacuum suction nozzle. A large volume leads to long exhausting times and possibly incorrect settings on the vacuum switch.
- Take into account accelerations, external influences, etc. on the work item when setting the required holding force.

Building up the vacuum:

- Pressurize the VN-...-P with an operating pressure at pressure connection [1]. A suitable vacuum will then be generated at vacuum connection [2]. The vacuum can be set by modification to the operating pressure. The work item must be held reliably against the suction gripper by the vacuum generated.

Setting the vacuum switch:

The setting of the vacuum switch for monitoring the vacuum depends on the application.

- Switch on the operating voltage. The VN-...-P is in the basic status.

Definition

Switching pressure SP	Vacuum at which the VN-...-P switches
Teach pressure TP	Vacuum at time of programming

Set the switching pressure in EDIT mode as follows:

1. Pressurize the VN-...-P with a teach pressure (e.g.: TP1). The sequence of the teach pressures is not important.
 2. Press the Edit button [7] until the LED [6] begins to flash. When the button is released, the VN-...-P saves the first teach pressure. The LED then continues to flash.
 3. Pressurize the VN-...-P with the other teach pressure (e.g.: TP2).
 4. Press the Edit button [7] until the LED [6] ceases to flash. When the button is released, the VN-...-P saves the second teach pressure and concludes the EDIT mode. The relationship between teach pressure, switching pressure and hysteresis is shown in the following table. With the VN-...-01-P the switching pressure is formed from the average value of both teach pressures ($SP = 1/2 (TP1 + TP2)$). With the VN-...-02-P the higher teach pressure becomes the switching pressure.
- Carry out a test run with various pressures to ascertain whether the VN-...-P switches as desired. The LED [6] lights up parallel to the programmed switching behaviour.

Type	Switching function	OUT
VN-...-01-P	Threshold value comparator with fixed hysteresis, normally-open contact	
VN-...-02-P	Threshold value comparator with fixed hysteresis, normally-open contact	

Building up the vacuum:

- Block the supply of compressed air at connection [1]. The vacuum connection [2] is exhausted via the silencer [4]. The work item detaches itself from the suction gripper.

5 Operation

Modifying the switching pressure, see chapter "Commissioning".

In the event of a power failure, the last setting of the switching pressure will be saved.

6 Trouble-shooting

Fault	Possible cause	Remedy
No LED display	Supply voltage not applied or no permitted operating voltage	Switch on supply voltage / maintain permitted operating voltage range
	Connections swapped (incorrect polarity)	Wire the VN-...-P as shown in the circuit diagram.
	Pressure failure	Eliminate pressure failure
	VN-...-P operated with non-permitted medium	Replace the VN-...-P and operate only with compressed air
	VN-...-P is defective	Send VN-...-P to Festo with description of fault
LED display or switching output does not react in accordance with the settings made	Short circuit or overload at the output	Eliminate short circuit/overload
	Incorrect switching point taught (e.g. at 0 bar)	Repeat the teach procedure (see chapter "Commissioning")
	VN-...-P is defective	Send VN-...-P to Festo with description of fault

7 Accessories

Designation	Type
Plug socket with cable M8x1, 3-pin	SIM-M8-3..D-...

8 Technical specifications

Type VN-...	-01-P	-02-P
Operating pressure [bar]	1 ... 8	
Overload pressure at vacuum connection [bar]	≤ 5	
Operating medium	Dried, filtered and non-lubricated compressed air	
Pressure measuring range [bar]	-1 ... 0	
Accuracy [% FS]	±1.5	
Threshold value setting range [bar]	-1 ... 0 (recommended working range: -0.95 ... -0.05 % FS)	
Hysteresis [% FS]	2	-
Setting range Hysteresis [% FS]	-	0 ... 100 (recommended working range: 5 ... 95 % FS)
Temperature coefficient of switching point [% FS/K]	±0.05	
Ambient temperature [°C]	0 ... +50	
Medium temperature [°C]	0 ... +60	
Operating voltage [V DC]	15 ... 30	
Idle current [mA]	≤ 30	
Max. output current [mA]	100	
Protective functions	Adapted to MZ, MY, ME coils	
- Inductive protective circuit	Pulsed	
- Protection against short circuit	Exists	
- Protection against overloading	Exists	
Protection class	IP40	
Interference emission	As per EN 61000-6-4 (industry)	
Interference immunity	As per EN 61000-6-2 (industry)	
Resistance to vibration as per DIN/IEC 68/EN 60068 part 2-6: 0,35 mm path at 10 ... 60 Hz, 5 g acceleration at 60 ... 150 Hz		
Resistance to shock as per DIN/IEC 68/EN 60068 part 2-27: 30 g acceleration at 11 ms duration (half-sine)		

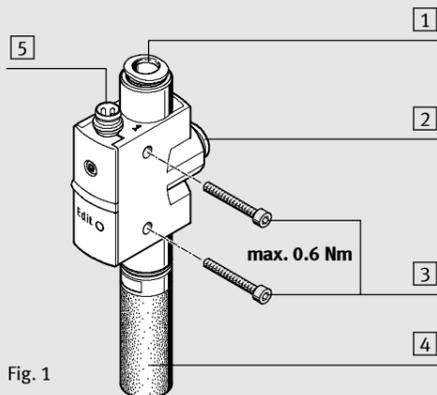


Fig. 1

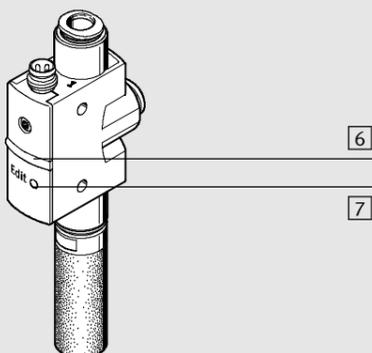


Fig. 2